



Horn Blaster CTE-AHMT

Thank you for your purchase. The CTE Horn Blaster is an air powered device for haunted house or fun house use. The Horn Blaster is a great addition to any professional haunted house or home haunt and runs on standard 110VAC power and compressed air. When triggered, the unit fires a very loud air horn. The effect is extremely startling, and will surprise even the most hard to scare patrons.

CTE constructs products using high quality components and parts. The Horn Blaster was designed and built to last many years. All CTE products carry a one (1) year warranty. The Horn Blaster is equipped with a seven (7) gallon air reserve tank, welded steel mounting base, steel pipe with Teflon seals, air gauge, safety valve and a high quality electronic valve.

The CTE Horn Blaster is shipped assembled and ready to use. You will need to supply a standard air compressor and 110VAC. The following section will guide you through a few simple steps to assist you in setting up your Horn Blaster. Please follow all instructions. They are important to the safety of everyone.

- 1. Unpack product and inspect for damage. If device is damaged, please contact CTE immediately.*
- 2. Mount the Horn Blaster to a stable surface using the mounting base located on the bottom of the air reserve tank. It is very important that the Horn Blaster be properly secured. Mounting hardware has been supplied for your convenience.*
- 3. Connect a female air fitting from your air compressor hose to the male fitting on the rear of the Horn Blaster. Then connect the 5' power cable into a 110VAC power source.*
- 4. Power up your air compressor and allow the Horn Blaster reserve tank to fill. You may use the regulator on the Horn Blaster compressor to adjust the output pressure. CTE recommends 80-100 PSI. However, you can set the regulator to the setting that works best for your application. **The components used in the Horn Blaster are rated for 100 PSI MAXIMUM. DO NOT EXCEED 100 PSI.***
- 5. Once the Horn Blaster reserve tank is full, it is ready for operation. To activate the Horn Blaster, press the trigger button. When the trigger is depressed the Horns will sound immediately.*

This device includes a 15' long manually operated push button trigger, and 5' power cable. If you would like to automate this effect, you can purchase an add-on controller from CTE.

For controller information visit www.ctechentertainmentfx.com

WARNINGS:
IMPORTANT PLEASE READ

By purchasing this product you have agreed to the following:

- Never point the Horn Blaster towards anyone.
- The Horn Blaster was designed to be used on adults only. If the Horn Blaster will be used in areas with small children, only use the manual trigger.
- The Horn Blaster is a startle "PROP" and should never be used as a weapon or toy.
- The Horn Blaster is extremely loud. Ear protection should be worn whenever possible.
- Never exceed maximum pressure rating of 100 PSI.
- Always secure the unit to the ground or a stationary wall.
- Always use at ground level with horns pointing no higher than knee level.
- Always disconnect power and air when not in use.
- This device should never be subjected to rain or excessive moisture.

C-Tech Entertainment Products LLC, employees, suppliers and affiliates are not responsible and/or liable for any damage or injury caused by the air cannon.

Limited Warranty for C-Tech Entertainment products:

C-Tech Entertainment ("CTE") provides the following Limited Warranty C-Tech Entertainment Products (excluding spare parts and consumables) distributed by CTE or through our authorized distribution channels:

CTE warrants that a C-Tech Entertainment Product, from the time of sale through the Limited Warranty period of one (1) year, will be free of defects in materials or workmanship and will conform to the performance specifications applicable for the particular C-Tech Entertainment Product.

All C-Tech Entertainment Products are subject to the Warranty Exclusions described below. A C-Tech Entertainment Product or component found to be defective will be repaired or replaced with new or refurbished product or component at CTE's option.

Purchasers may obtain warranty service and further information within the applicable Limited Warranty period for the C-Tech Entertainment Product purchased by calling (612) 735-7351 or by email CTEProducts@aol.com.

Proof of purchase is required to demonstrate eligibility for warranty service. Warranty claims must be made directly to C-Tech Entertainment.

Warranty Exclusions

Limited Warranty does not apply to a C-Tech Entertainment Product that has been subjected to physical damage after purchase, caused, for example, by casualty, accident, acts of God or transportation, including (a) by a failure to properly package and ship the product back to CTE for warranty service in accordance with CTE's packaging and Shipping Guidelines; (b) from service, modification or repair not performed by CTE or a service provider authorized by CTE or by tampering, use of counterfeit or other non CTE approved components, assemblies, accessories, or modules; (c) by misuse, unreasonable handling or maintenance, mistreatment, operator error, failure to provide proper supervision or maintenance.